

# FAAC Coding Instructions



*Genuine XT4*



*Genuine 433LC*



*Genuine XT4*

## Programming Your Remote Into the Motor

- 1 Push and release the learn button on the receiver board. A red LED will illuminate
- 2 Push and hold a button on your remote control for 2-3 seconds, or until the light on receiver flickers. this indicates that the remote has been coded in.
- 3 Wait 20 seconds and the remote will be programmed in.