

# BFT Mitto Coding Instructions



*Genuine 2M*



*Genuine 4M*

## Programming Your Remote Into the Motor

### **If your receiver does not have a screen:**

- 1 Locate the receiver control board in your motor. On it are two outputs: SW1 & SW2
- 2 Press the button for the output you want to control (SW1 for Output 1, SW2 for Output 2). The LED will begin to flash.
- 3 Press and release buttons 3 & 4 on your new remote at the same time. The LED will rapidly flash, signifying the remote coded in.
- 4 Wait 15 seconds and the remotes will program in

### **If your receiver has a screen:**

- 1 Press "OK" on the receiver twice so it displays "PARA"
- 2 Press the "-" button twice so it displays "RADIO"
- 3 Press "OK" on the screen will display "ADJ START", then press "OK" again so it displays "Hidden Button"
- 4 Press and hold (at the same time) buttons 3 & 4 on the remote until the screen shows "Release". Once you let go, it will display "Desired Button".
- 5 Press any button you want to operate the motor with. The screen will display "OK"
- 6 Wait 30 seconds to allow the motor to exit Learn Mode. Your remote will now work.

## Clearing The Codes From Your Motor

- 1 Press the black program button until the red light begins to flash slowly, then release
- 2 Press the button again until the light starts to quickly flash, then release
- 3 Wait for ten seconds, then check that your remote no longer operates the door