

ATA PTX-5 Coding Instructions



Genuine PTX5v2



Genuine PTX5v1



Compatible PTX5v1

Programming Your Remote Into the Motor

- 1 Press and hold the blue door code button, or the SW1 / SW2 button
- 2 Press the desired transmitter button for two seconds, then let go
- 3 Press down the same transmitter button for two seconds, and then let go
- 4 Let go of the Door Code or SW button.

Clearing The Codes From Your Motor

- 1 Turn off the opener
- 2 Press and hold the blue door code button, or the SW1 / SW2 button
- 3 Whilst still holding the button down, turn power onto the motor.
- 4 After 15 seconds, let go and test that your remote no longer operates the motor

Watch us on

