

# B&D TRG Coding Instructions



*Genuine TRG*

## **Programming Your Remote Into the Motor**

- 1 Remove front cover from your existing remote.
- 2 Remove the cover from your new remote.
- 3 Simply copy the 8 dipswitch combination from your old remote to your new remote
- 4 Refit covers. Your remote is now ready for use!

## **Changing The Codes In Your Motor**

- 1 Remove your control box from the wall, and open the rear cover.
- 2 Inside are 8 dipswitches, change them to any new combination
- 3 Copy this code to your remotes, and the code will be changed.

Watch us on

