

Avanti RemotesProgramming Guide





Programming Your Remote Control

- 1 Hinge Open your courtesy light to expose the "Learn" Button
- 2 Press the "Learn" button until the LED indicator grows solid. This is normally less than two seconds
- 3 Press and hold the desired remote button until the LED turns off, then let go
- 4 Press and hold the same button down on the remote again and the LED will rapidly flash
- 5 Wait for the LED to stop flashing, then test the operation of your new remote control

Clearing The Codes From Your Motor

- 1 Hinge Open your courtesy light to expose the "Learn" Button
- 2 Press the "Learn" button until the LED indicator grows solid. This is normally less than two seconds
- 3 Press and hold the black "Run" button until the LED begins to rapidly flash
- 4 Once the LED stops flashing, test to ensure your remotes no longer operate the motor

For technical support, see our website below. Please have the model number of your remote control and garage / gate opener before calling.