



National Garage
REMOTES & OPENERS


B&D KPX7 Programming Guide



B&D KPX7v1 Keypad



B&D KPX7v2 Keypad

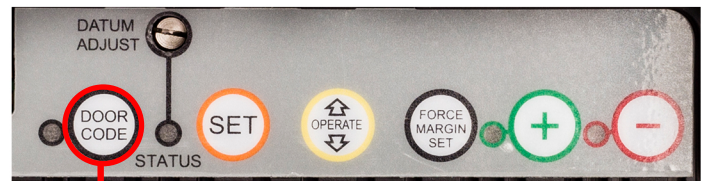

Door Code Button on a B&D CAD S

Initial PIN Code Setup

- 1 Press and hold Channel 1 (CH1) until a long beep is heard.
- 2 Press '1111' then CH1.
- 3 Enter the code you wish to use for your keypad (eg. 2460) then CH1.
- 4 Repeat Step 3 within 3 seconds to confirm the new code.

Programming Your Remote Control

- 1 Press and hold the Door Code / Code Set Button, or the SW1 / SW2 button
- 2 Enter your PIN code then press one of the four channel buttons (CH1 - CH4)
- 3 Press down the same CH button again
- 4 Let go of the Door Code / Code Set or SW2 button. The CH button will now control the programmed door or gate
- 5 Test the operation of your keypad, by entering the PIN code and then pressing the CH button

Additional Codes & Changing A Code

Additional codes can be done by following the above steps and using a different CH button. A code can be any combination of digits, except for '8888 8888' or '1111'.

- 1 To change a stored code, press and hold the CH button until a long beep is heard.
- 2 Enter the old code and press the same CH button.
- 3 Finally, enter the new code, the CH button. Within 3 seconds, enter the new code again

For technical support, see our website below.

Please have the model number of your remote control and garage / gate opener before calling.

www.ngro.com.au