



Genuine TR-4RS

Programming Your Remote Control

- 1 Remove the "Clear" jumper on your motor and the LED light will turn on
- 2 Using your new remote control, press any button you wish to operate the motor for five seconds (or until the LED turns off)
- 3 Replace the "Clear" jumper on your motor
- 4 Repeat steps 1-3 for any additional buttons or remote controls that need to be coded into the motor
- 5 Test the operation of your new remote

Clearing The Codes From Your Motor

- 1 Disconnect the unit from power and remove the "Clear" jumper from the receiver
- 2 Wait for 1 minute, then reconnect the power supply. The LED on the receiver will turn on.
- 3 Before the LED light turns off, replace the "Clear" jumper. This must be done before the LED turns off.
- 4 The LED will flash twice to indicate all remote controls were deleted from the receiver's memory.

For technical support, see our website below.
Please have the model number of your remote control and garage / gate opener before calling.