



Genuine Blue PCK43302



Genuine Red PCK43302

Programming Your Remote Control

Receiver to Remote Control:

- 1 Check that all switches are "OFF" on the receivers 12-way dip switch
- 2 Press and hold the program button on the receiver
- 3 Press the remote button for 2 seconds, receiver LED will flash and then turn Green
- 4 Release the button on the receiver and the remote
- 5 Press remote control button to test the receiver output

DELETING CODES:

Short the Code Reset pins on the receiver for 10 seconds. This will delete all the remotes from the receiver's memory.