



National Garage
REMOTES & OPENERS

FAAC

Programming Guide



Genuine XT4



Genuine 433LC



Genuine XT4

Programming Your Remote Control

- 1 Remove the "Clear" jumper on your motor and the LED light will turn on
- 2 Push and hold a button on your remote control for 2-3 seconds, or until the light on the receiver flickers. This indicates that the receiver has accepted and is processing the remote control.
- 3 Wait 20 seconds and the remote will be programmed in

For technical support, see our website below.
Please have the model number of your remote control and garage / gate opener before calling.

www.ngro.com.au