



National Garage
REMOTES & OPENERS

BFT Mitto **Programming Guide**



Genuine 2M



Genuine 4M

Programming Your Remote Control

If your receiver does not have a screen

- 1 Locate the receiver control board in your motor. On it are two outputs, labelled "SW1" & "SW2"
- 2 Press the button for the output you want to control (SW1 for Output 1, SW2 for Output 2). The LED will begin to flash
- 3 Press and release buttons 3 & 4 on your new remote at the same time. The LED will rapidly flash, signifying the remote coded in
- 4 Wait 15 seconds and the remotes will program in

If your receiver has a screen

- 1 Press "OK" on the receiver twice so it displays "PARA"
- 2 Press the "-" button twice so it displays "RADIO"
- 3 Press "OK" and the screen will display "ADJ START", then press "OK" again so it displays "Hidden Button"
- 4 Press and hold (at the same time) buttons 3 & 4 on the remote until the screen shows "RELEASE". Once you let go, it will display "DESIRED BUTTON".
- 5 Press any button you want to operate the motor with. The screen will display "OK".
- 6 Wait 30 seconds to allow the motor to exit Learn Mode. Your remote will now work.

For technical support, see our website below.
Please have the model number of your remote control and garage / gate opener before calling.

www.ngro.com.au