



**National Garage**  
REMOTES & OPENERS

## ATA PTX4 Programming Guide



Genuine PTX4



Auto Openers PTX4



Door Code Button

### Programming Your Remote Control

- 1 Press and hold the blue door code button, or the SW1 / SW2 button
- 2 Press the desired transmitter button for two seconds , then let go
- 3 Press down the same transmitter button for two seconds and then let go
- 4 Let go of the Door Code or SW2 button
- 5 Test the operation of your new remote

### Clearing The Codes From Your Motor

- 1 Turn off the opener
- 2 Press and hold the blue door code button or the SW1 / SW2 button
- 3 Whilst holding the button down, turn power onto the motor and continue to hold for 15 seconds, then let go
- 4 Test that your remote no longer operates the motor
  - Please note, this will clear every remote programmed into the motor

For technical support, see our website below.  
Please have the model number of your remote control and garage / gate opener before calling.

[www.ngro.com.au](http://www.ngro.com.au)