



National Garage
REMOTES & OPENERS

ATA KPX7v2 Programming Guide



ATA KPX7v2 Keypad



Initial PIN Code Setup

- 1 Press and hold the FCN button. The keypad will beep and flash to indicate it is in learning mode. Release the button.
- 2 Enter your new 4-digit User Pin Code (E.g. 2640), then press FCN.
- 3 Re-enter the same 4-digit User Pin Code (E.g. 2640), then press FCN.
- 4 The keypad will beep and flash to indicate it is exiting learning mode.

 
WARNING - Do not lose your 4-digit pin! If you forget your PIN, you need to return the KPX7v2 to ATA for a factory reset.

Programming Your Keypad

- 1 Decide which channel you wish to use to operate the garage door with (Button 1 through 4).
- 2 Push and hold the door code button on your garage door opener. This is held until step 5.
- 3 Push and hold your chosen Channel (E.g. Button 1) for two seconds, then let go.
- 4 Push and hold your Channel (E.g. Button 1) for another two seconds, then let go
- 5 Release your channel button, then test the operation of your keypad by inputting your PIN code, then pressing the channel button (E.g. 26401)

Additional Codes & Changing A Code

Short cut Guide - Change User Pin



For technical support, see our website below.
Please have the model number of your remote control and garage / gate opener before calling.

www.ngro.com.au